



Penmap - Working with Coordinate Systems

Penmap for Android OS





Summary


This document aims to provide a quick guide on how to set Coordinate Systems on your mobile device inside Trimble Penmap.




Working with Coordinate Systems

Steps...


1. Once you have a project opened in Penmap, select the '☰' button on the top-left of screen.
2. Then select the '**GNSS**' option as seen Step 2.
3. Next, select the '**Coordinate System**' option.
4. Select the *dropdown arrow* under the '**System**' section, then choose the Coordinate System as desired from the available list.

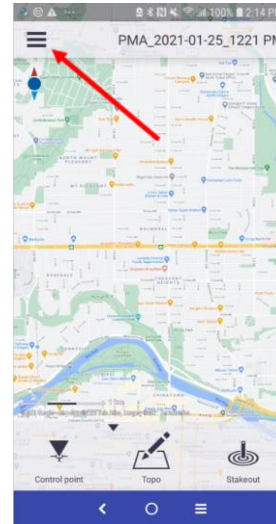


1

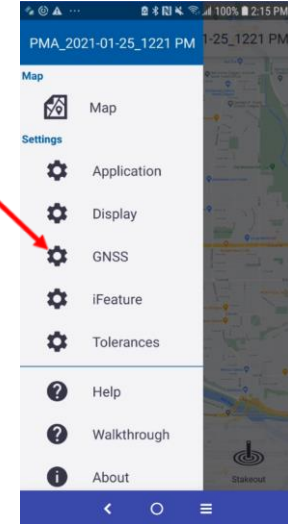

2

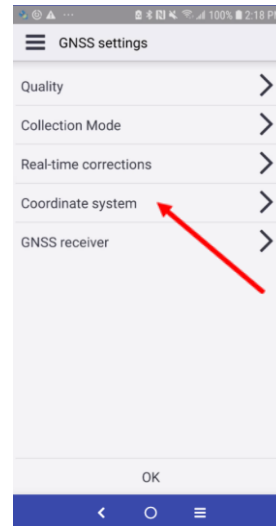

3

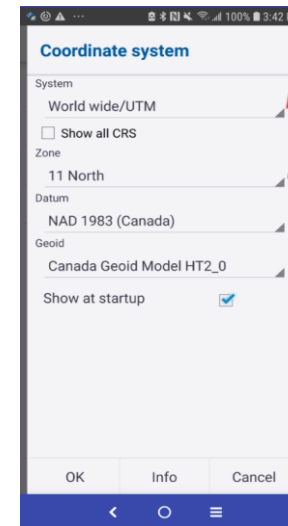


4


Working with Coordinate Systems

Steps...

- Once you have chosen a *Coordinate System*, press '**OK**' in the bottom-right of the screen to set the new Coordinate System.
- If the new Coordinate System you've selected requires additional downloads, the window shown in Step 6 will appear. Click on the '**Download**' button in the bottom-left to download required files.

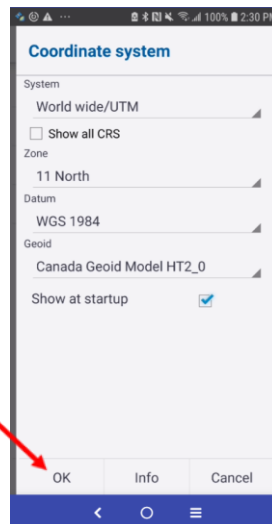

5

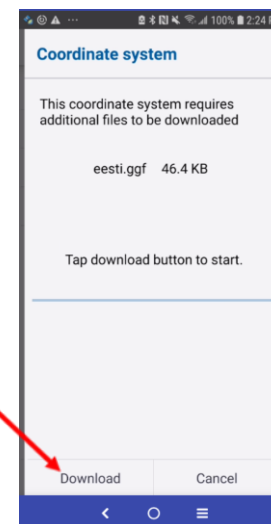

6

NOTE: To update the PenMap Coordinate System see PenMap Manager.



e-Learning

E-Learning@Cansel.ca

Support: 1.800.357.0561
cansel.support@cansel.ca

